


World Phone Plug and PowerPlug Guide

Country	TeleDiapler	Code	IDD	PowerPlugs	Voltage	Freq/Hz	Country	TeleDiapler	Code	IDD	PowerPlugs	Voltage	Freq/Hz	Country	TeleDiapler	Code	IDD	PowerPlugs	Voltage	Freq/Hz
Abu Dhabi	British, US RF-11	97	00	PWR-104,106, 107,116	220V	50Hz	China	British (old), US RF-11	233	00	PWR-104,107,115,116	220V	50Hz	Norway	Finnish, Norwegian (2)	47	00	PWR-106,115	220V	50Hz
Afghanistan	Russian/Poland	98	00	PWR-107,115,116	220V	50Hz	Chile	British	230	00	PWR-104,106,115	220V	50Hz	Okinawa	Japan, US RF-11	81	00	PWR-102,101,103	100V	60Hz
Ajman	British, US RF-11	971	00	PWR-104,106,107,116	220V	50Hz	Cosovo	Greek (2), US RF-11	36	00	PWR-115,107,113	220V	50Hz	Omaha	British, US RF-11	969	00	PWR-104,107,115	240V	50Hz
Albania	Greek, Russian/Poland	355	00	PWR-115	220V	50Hz	Croatia	British	299	009	PWR-106,115	220V	50Hz	Pakistan	US RF-11	92	00	PWR-107,115,116	230V	50Hz
Algeria	French	213	00	PWR-115,107,106	127/220V	50Hz	Czechia	US RF-11	473	01	PWR-104,115,107	220V	50Hz	Panama	Australian	507	00	PWR-101,102,103	120V	60Hz
American Samoa	US RF-11	684	00	PWR-103,101,102,106	120/220V	50/60Hz	Guadeloupe	US RF-11, French	809	01	PWR-106,115,107,113	220V	50Hz	Paraguay	US RF-11	507	00	PWR-101,102,103	240V	60Hz
Andorra	US RF-11	376	00	PWR-106,115	220V	50Hz	Guam	US RF-11	671	01	PWR-101,102	110V	60Hz	Peru	US RF-11	51	00	PWR-101,102,115	110/220V	50/60Hz
Angola	US RF-11/Portuguese	244	00	PWR-115	220V	50Hz	Guatemala	US RF-11	502	00	PWR-101,102,104,103	120V	60Hz	Romania	Russian/Poland	48	0-00	PWR-106,115,113	220V	50Hz
Antigua	US RF-11	264	01	PWR-101,102,104,115	240V	50Hz	Haiti	US RF-11	599	00	PWR-101,102	110V	60Hz	Portugal	Portuguese, US RF-11	351	00	PWR-106,115,113,107	230V	50Hz
Armenia	US RF-11	672	00	PWR-101,102,104,115	240V	50Hz	Hong Kong	British, US RF-11	852	001	PWR-104,107	200V	50Hz	Puerto Rico	US RF-11	787	01	PWR-101,102	120V	60Hz
Australia	US RF-11	61	00	PWR-101,102,104,115	240V	50Hz	Hungary	Hungarian, Austrian	36	00	PWR-106,115	220V	50Hz	Qatar	British, US RF-11	974	00	PWR-104,107	240V	50Hz
Azerbaijan	US RF-11	269	01	PWR-101,102,104	230V	50/60Hz	India	US RF-11	91	00	PWR-115,107,104,106	220V	50Hz	Reunion Island	French, Australian, US RF-11	262	00	PWR-115,106	240V	50Hz
Bahrain	British, US RF-11	973	00	PWR-104,107	220V	50Hz	Indonesia	Australian, US RF-11	62	00	PWR-106,115,113	110/220V	50/60Hz	Romania	US RF-11	40	00	PWR-106,115	220V	50Hz
Bangladesh	British (old), US RF-11	880	00	PWR-106,107,115,102,104	220V	50Hz	Iran	US RF-11, Turkish, Iran/Kuwait	98	00	PWR-106,115	220V	50Hz	Russia	Russian/Poland	7	8-10	PWR-106,115	220V	50Hz
Barbados	British	246	01	PWR-101,102,106	230V	50Hz	Israel	British, US RF-11	972	00	PWR-104,115	220V	50Hz	Saudi Arabia	British, French, US (old), Saudi	966	00	PWR-115,107,113	127/220V	50/60Hz
Belarus	US RF-11	248	01	PWR-101,102,104	230V	50/60Hz	Italy	Italian (2 types)	39	00	PWR-106,115,101,105	220V	50Hz	Senegal	US RF-11	221	00	PWR-104,107	220V	50Hz
Belgium	British, US RF-11	32	00	PWR-106,115,113	220V	50Hz	Japan	Japanese, US RF-11	81	00	PWR-101,102	100V	60Hz	Sierra Leone	British (old)	232	00	PWR-104,107	220V	50Hz
Belize	British, US RF-11	501	00	PWR-101,102,104	110/220V	50/60Hz	Jersey	British (2 types)	37	00	PWR-106,115,107,113	220V	50Hz	Slovenia	Yugoslavian, Russian/Poland	386	00	PWR-106,115	220V	50Hz
Benin	French, S. African	229	00	PWR-107,115	220V	50Hz	Johnsland	US RF-11	353	00	PWR-104,115	220V	50Hz	Solomon Islands	Australian	677	00	PWR-104,107	220V	50Hz
Bermuda	US RF-11	441	01	PWR-101,102,103,104	120V	60Hz	Jordan	British, US RF-11	962	00	PWR-104,106,115,107,113	220V	50Hz	South Africa	South African	27	09	PWR-116,104	220V	50Hz
Bhutan	US RF-11	975	00	PWR-101,102,106,115	110/220V	50/60Hz	Kazakhstan	Russian/Poland	7	8-10	PWR-106,115	220V	50Hz	Spain	US RF-11	34	07-	PWR-106,115,113	220V	50Hz
Bhuvia	US RF-11	991	00	PWR-101,102,106,115	110/220V	50/60Hz	Kenya	British, British (old), US RF-11	254	00	PWR-104,107	220/240V	50Hz	St. Lucia	British, US RF-11	1	00	PWR-106,115,113	220V	50Hz
Borneo	US RF-11	60	00	PWR-106,115,104,107	220V	50Hz	Korea	Russian/Poland	850	00	PWR-102,103	120/220V	50/60Hz	St. Martin	French	598	00	PWR-101,102	115V	60Hz
Brazil	US RF-11	55	00	PWR-104,115,107,113	110/220V	50/60Hz	Korea North	US RF-11	850	00	PWR-104,115	220V	50Hz	St. Michael	British, US RF-11	670	01	PWR-101,102	115V	60Hz
British Virgin Islands	British	294	01	PWR-104,116	220V	50Hz	Korea South	US RF-11	82	00	PWR-102,102,115,113,106	220V	50Hz	St. Pierre & Miquelon	French	598	00	PWR-101,102	115V	60Hz
Bulgaria	Russian/Poland	359	00	PWR-106,115	220V	50Hz	Kuwait	British, US RF-11	965	00	PWR-104,106,115,107,104,103	110/220V	50/60Hz	St. Vincent	British, US RF-11	1	00	PWR-106,115,113	220V	50Hz
Burkina Faso	French	226	00	PWR-115,113	220V	50Hz	Laos	US RF-11	856	14	PWR-101,102,115,113,106	220V	50Hz	Swaziland	British	268	00	PWR-116,115	220V/230V	50Hz
Burundi	South African	257	90	PWR-106,115,113	220V	50Hz	Latvia	Russian/Poland	371	00	PWR-106,115	220V	50Hz	Sweden	Swedish (2)	46	00	PWR-106,113,115	220V	50Hz
Cambodia	US RF-11	855	00	PWR-101,102,106	220V	50Hz	Lebanon	US RF-11	961	00	PWR-115,113,101,102,107	110/220V	50Hz	Switzerland	British	41	00	PWR-106,113,115	220V	50Hz
Cameroon	French, S. African	237	00	PWR-107,115	220V	50Hz	Lesotho	British, S. African, US RF-11	266	00	PWR-115,116	220V	50Hz	Taiwan	British, US RF-11	886	00	PWR-104,106,115,107	110V	60Hz
Canada	US RF-11	1	01	PWR-101,102	110V	60Hz	Liberia	US RF-11	231	00	PWR-102,104,101	120V	60Hz	Tanzania	British	255	00	PWR-104,115,107	220V	50Hz
Cape Verde Islands	US RF-11	34	00	PWR-106,115,113	220V	50Hz	Lithuania	US RF-11	370	00	PWR-106,115	220V	50Hz	Thailand	US RF-11	66	00	PWR-101,102,115	220V	50Hz
Cayman Islands	US RF-11	1	01	PWR-101,102	110V	60Hz	Luxembourg	French, US RF-11	352	00	PWR-106,115	220V	50Hz	Togo	French	228	00	PWR-115	220V	50Hz
Central African Rep	US RF-11	236	19	PWR-101,102,113	220V	50Hz	Macao (Macau)	Portuguese, US RF-11	853	00	PWR-106,115	220V	50Hz	Tonga	British	676	00	PWR-103,107,115	220V	50Hz
Chad	US RF-11	235	00	PWR-104,115	240V	50Hz	Macedonia	British, US RF-11	389	00	PWR-106,115	220V	50Hz	Turkey	Turkish, US RF-11	90	00	PWR-115,113,106,114	127/220V	50Hz
Chile	US RF-11	56	00	PWR-103	220V	50Hz	Madagascar	French	261	16	PWR-106,115,107,113,103	127/220V	50Hz	Turkmenistan	Turkish, Russian, RF-11	993	8-10	PWR-106,115	220V	50Hz
China	US RF-11	86	00	PWR-114,115,104	220V	50Hz	Madagascar	French	261	16	PWR-106,115,107,113,103	127/220V	50Hz	Turks & Caicos Is	US RF-11	649	01	PWR-101,102	120V	60Hz
Christmas Island	US RF-11	672	00	PWR-103	220/240V	50Hz	Malaysia	British, US RF-11	60	00	PWR-104	220V	50Hz	Tuvalu (Poline Is)	British, US RF-11	688	00	PWR-103	220V	50Hz
CIS	Russian/Poland	7	00	PWR-106,115	220V	50Hz	Maldives Is	US RF-11	960	00	PWR-116,102,104,107,113,141,15	220V	50Hz	Uganda	US RF-11	256	00	PWR-104,107	220/240V	50Hz
Cocos Islands	British, US RF-11	672	00	PWR-101,102,115,101	110/220V	50/60Hz	Malta	British	356	00	PWR-106,115,113	220V	50Hz	Ukraine	Russian/Poland	380	8-10	PWR-106,115	220V	50Hz
Colombia	Colombian, US RF-11	57	90	PWR-102,115,101	110/220V	50/60Hz	Mauritania	French	222	00	PWR-106,115,107,113	220V	50Hz	United Arab Emirates	US RF-11	971	00	PWR-104,106,107,116	220V	50Hz
Congo	French	242	00	PWR-115,113	220V	50Hz	Mauritius	French, US RF-11	230	00	PWR-104,115	220V	50Hz	United Kingdom	British, US RF-11	44	00	PWR-104	220V	50Hz
Cook Islands	Australian	682	00	PWR-103	240V	50Hz	Mexico	US RF-11	52	98	PWR-101,102	120V	60Hz	United States	US RF-11	1	01	PWR-101,102	120V	60Hz
Costa Rica	US RF-11	506	00	PWR-101,102	110/220V	50/60Hz	Micronesia	British, French, RF-11	691	01	PWR-101,102	120V	60Hz	Uruguay	US RF-11	598	00	PWR-103,115,114	220V	50Hz
Croatia	Yugoslavian	385	00	PWR-106,115	220V	50Hz	Moldova	Russian/Poland, US RF-11	377	00	PWR-106,115,107	220V	50Hz	Uzbekistan (Tashkent)	Russian/Poland	7	8-10	PWR-106,115	220V	50Hz
Cuba	Russian/Poland, US RF-11	53	119	PWR-102,106,101	110V	60Hz	Monaco	French	377	00	PWR-106,115,107	220V	50Hz	Venezuela	Venezuelan, US RF-11	58	00	PWR-101,102	120V	60Hz
Cuba (Quintanaro)	US RF-11	53	00	PWR-101,106	110/220V	50Hz	Mongolia	Russian/Poland	976	00	PWR-107,115	220V	50Hz	Vietnam	US RF-11	84	00	PWR-101,102,106,115	110/220V	50/60Hz
Cyprus	British, US RF-11	357	00	PWR-104,115,113	220V	50Hz	Montenegro	US RF-11	382	00	PWR-102,104,101	230V	50Hz	Virgin Islands (US)	US RF-11	839	01	PWR-102,101,115	110V	60Hz
Czech Republic*	Czech Republic	420	00	PWR-106,115,113	220V	50Hz	Morocco	French	212	01	PWR-106,115,107,113	220V	50Hz	Wake Island	US RF-11	808	00	PWR-104	220/230V	50Hz
Denmark	Danish	46	00	PWR-106,115	230V	50Hz	Mozambique	Portuguese, US RF-11	258	00	PWR-106,115	220V	50Hz	Wallis & Futuna Is	French, US RF-11	681	19-	PWR-115,106	220/240V	50Hz
Diego Garcia	US RF-11	246	00	PWR-106,115	230V	50Hz	Myanmar (Burma)	US RF-11	95	00	PWR-104,107,115,106	220V	50Hz	Western Samoa	US RF-11	967	00	PWR-104,115,107,102	220/230V	50Hz
Djibouti	French	253	00	PWR-106,115,113	220V	50Hz	Namibia	South African	264	09	PWR-107,115,116	220V	50Hz	Yemen Arab Republic (North Yemen)	US RF-11	967	00	PWR-106,115	220V	50Hz
Dominica	US RF-11	767	00	PWR-104,107	220V	50Hz	Nauru	British, US RF-11	674	115										



USB Telecharger™
Ideal for laptop users the Telecharger enables you to charge your mobile phone from the USB port of your laptop.
Available in six models to cover most popular mobile phone types.
See www.teleadapt.com/telecharger for more details

WARNING!
Teleadapt PowerPlugs do NOT convert voltage.
Incorrect use may result in damage to equipment - or injury.
Check that your equipment is compatible with the local mains voltage.
To check the suitability of your equipment for local use, please go to www.teleadapt.com/guide for details of the manufacturer's destination country and in the instructions supplied by the manufacturer of your equipment to confirm the maximum voltage (a range of 100V - 240V would be required). Some appliances may require a transformer for use overseas.
Teleadapt does not accept liability for damage to equipment, or injury, due to incorrect use.

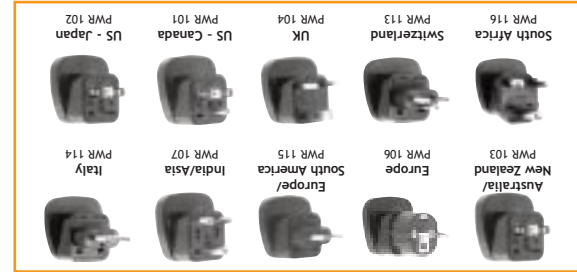

World Phone Plug and PowerPlug Guide

Telephone and power sockets vary from country to country. Our TeleDaptors® provide a direct connection for your modem cable to all foreign phone systems that use modular phone plugs. Our PowerPlugs provide a safe physical connection to foreign power sockets.

Keep this guide with your laptop and you need never be unconnected again. For more information see our website at www.teleadapt.com

TeleAdapt Group UK
Tel: +44 (0)20 8233 3000
Fax: +44 (0)20 8233 3132
info@uk.teleadapt.com

TeleAdapt Group USA
Tel: +1 408 350 1440
Fax: +1 408 350 0160
info@us.teleadapt.com

TeleAdapt Group HK
Tel: +852 2780 9020
Fax: +852 2780 9019
info@hk.teleadapt.com



INSTRUCTIONS FOR THE UK TO US ADAPTER

Any TeleDaptor™ (eg Switzerland)

British plug slots into the TDPT 177

