



### System Hardware Setup

The Hotel version of Sound Rise includes a bracket to ensure the DC power jack cannot be removed. For additional security, it also includes a lanyard to allow tethering of the Sound Rise to furniture if required. See instructions below for fitting.


- 1 Insert the DC plug of the supplied power adaptor into the DC IN jack on the back of the system.

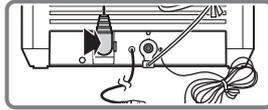


- 2 Place the bracket onto the DC plug. Insert the tabs of the bracket into the slots of the system (A), and push the bracket up to lock it in place (B).

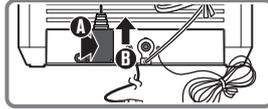


- 3 Align the screw hole on the bracket and the system, and tighten the screw to fix the bracket to the system.

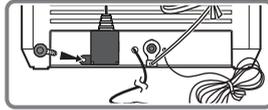


- 4 Fix the end of the lanyard to a secure and firm place using the supplied screw. (Or other screw if applicable for fixing on different places)

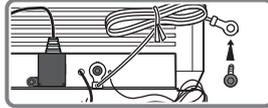

- 5 Fully uncoil and extend the FM antenna wire on the back of the system for the best possible radio reception.

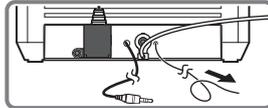

- 6 Remove the battery insulation tape from the battery door.

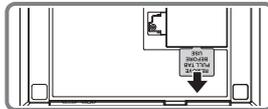


- 7 Leave the guest instruction card or quick start guide in the guest room with the Sound Rise.

### System Clock Setup

For the first time setup, there is a need to setup the calendar and clock time. The unit has Daylight Saving Time (DST) function and can adjust the clock automatically when this function is enabled.

- 1 When the system is plugged into AC power first time, the system enters system setup mode.
- 2 The "DST setting" will blink.
- 3 Press the <</>> or -/+ buttons to toggle the DST function ON/OFF. (The DST function is enabled by default and is suitable for US only. Regions out side of US select DST to OFF.)
- 4 Press **SNOOZE/ENTER** button to confirm the setting.
- 5 Repeat 3 and 4 above to adjust year, month, date, hour, minute, AM/PM, and 12/24HR mode selection.

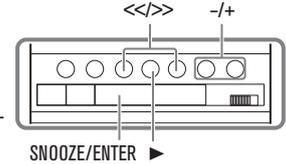

#### Note:


- If you want to change the date and the clock, press and hold **SNOOZE/ENTER** button and the ► button simultaneously for 5 seconds in standby mode, then operate according to step 2~5 above to set the DST, calendar and the time.

### System Reset

Press and hold **SNOOZE/ENTER** button and the ✱ **PAIR** button simultaneously for 5 seconds to reset the Bluetooth connection, dimmer level, alarm setting, and volume level to factory default settings.

#### Note:

- After resetting clock to the system clock, the Bluetooth connection and the following previous user settings (including dimmer, alarm and volume setting) will also be reset to default setting.

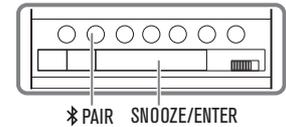

### Battery Replacement

There is a backup battery for keeping the date and the clock time. When the level of backup battery is low, the low battery indicator 🔋 will appear on the display. It is the time to replace the battery.

### Out of Power Indication

After the system is out of power completely (no AC plugged and backup battery has been drained), once the power is resumed, the system will be reset to default settings as the first time usage and the "year digit" will keep blinking to alert hotel staff to set the date and the clock time again.